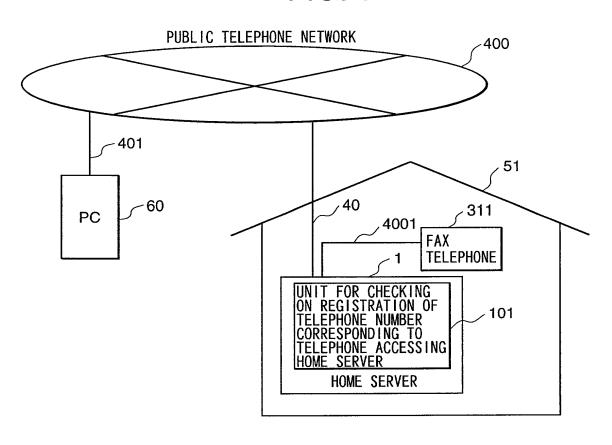
FIG. 1



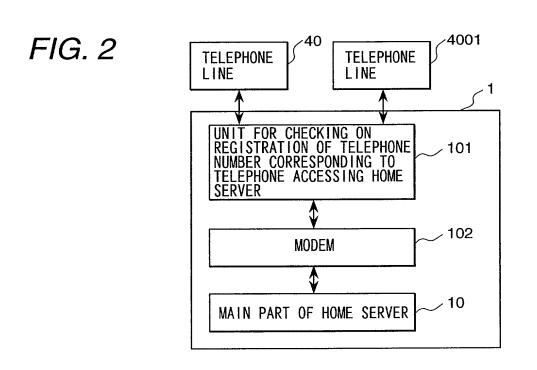


FIG. 3

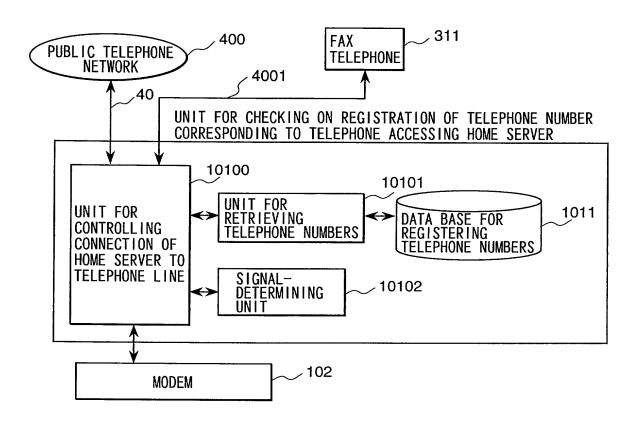


FIG. 4

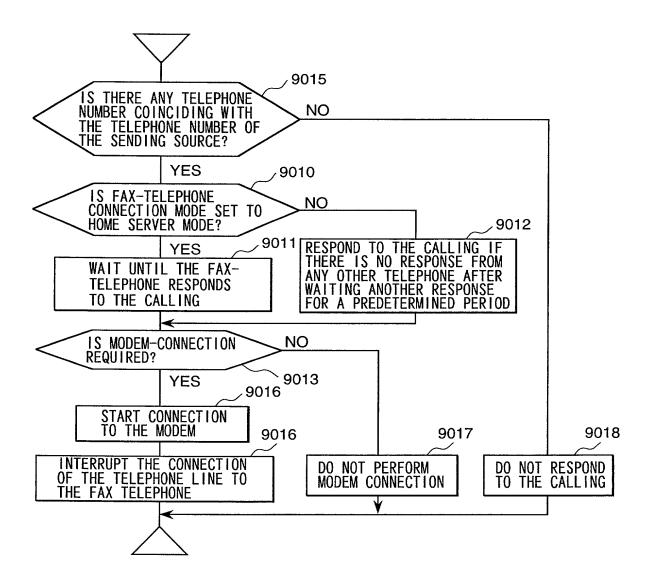
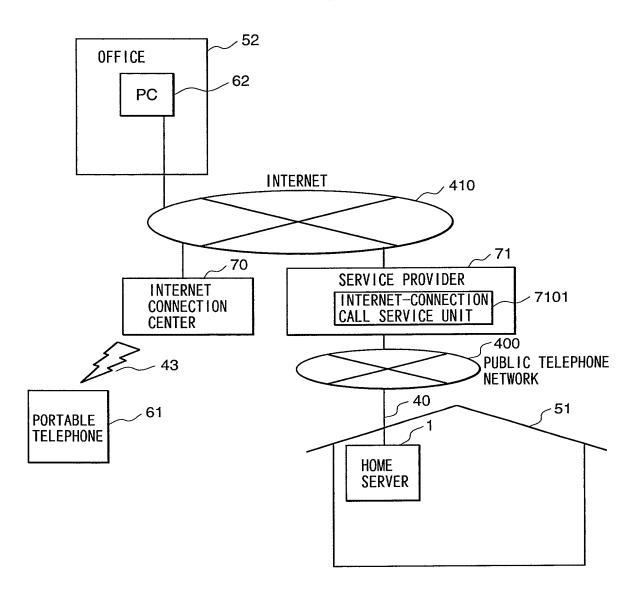
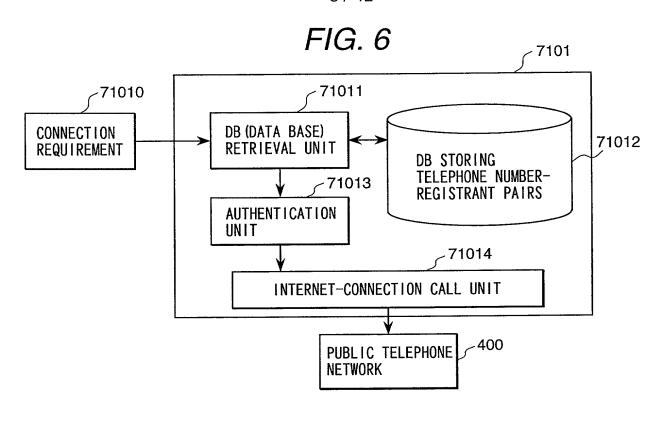


FIG. 5





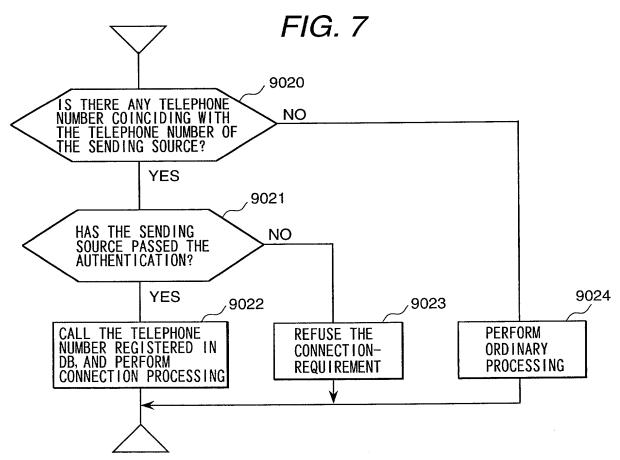


FIG. 8

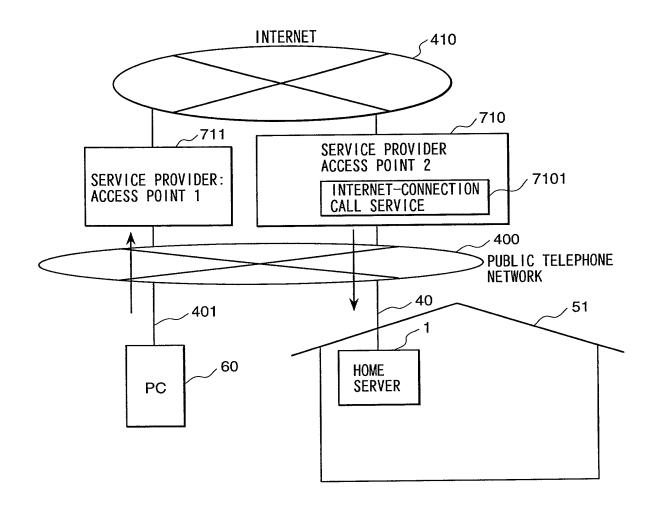


FIG. 9

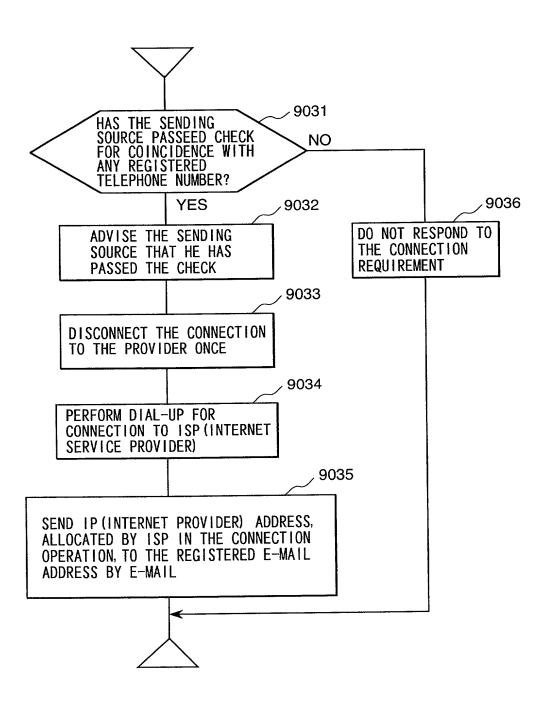


FIG. 10

TELEPHONE NUMBER OF COMPANY	E-MAIL ADDRESS OF COMPANY		
TELEPHONE NUMBER OF PORTABLE TELEPHONE	E-MAIL ADDRESS OF PORTABLE TELEPHONE		
:	:		
•	•		

FIG. 11

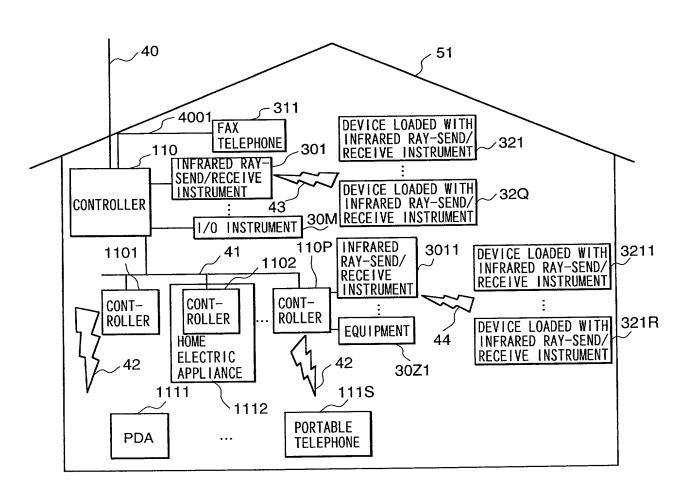


FIG. 12


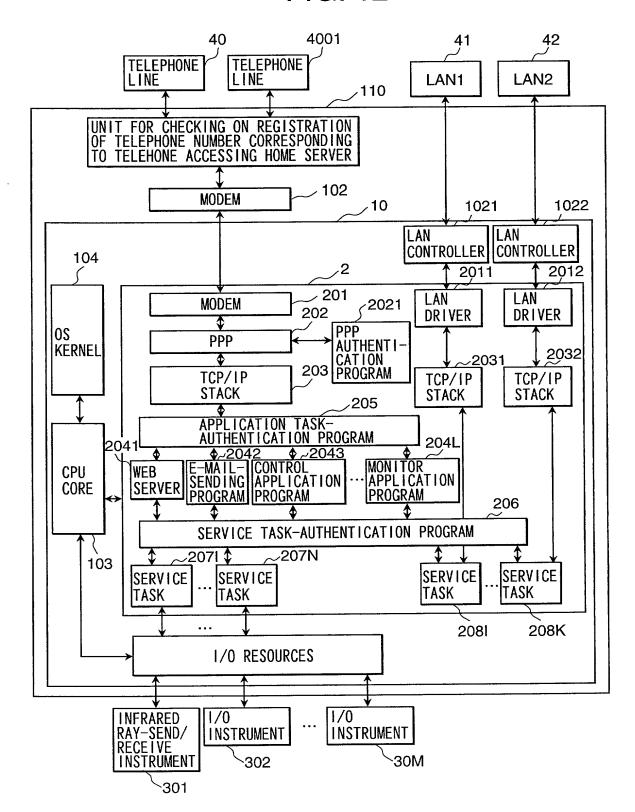


FIG. 13

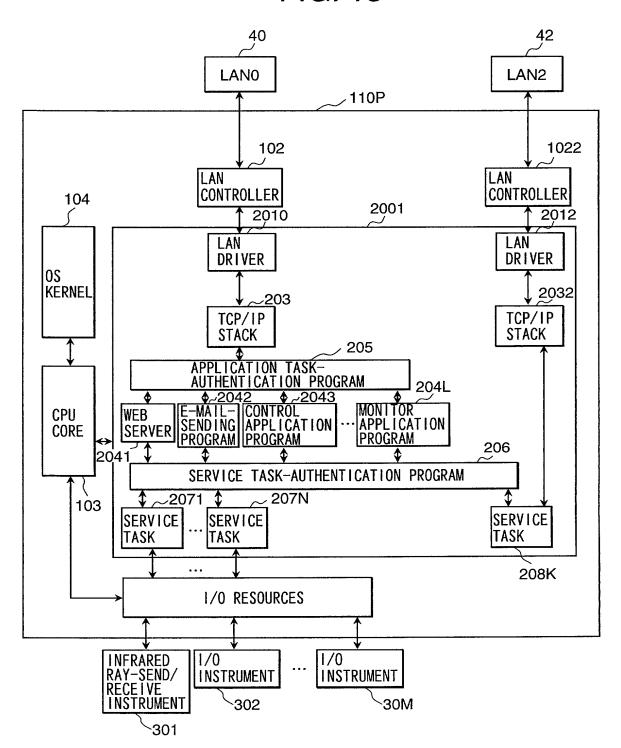

11 / 12

FIG. 14

CATEGORY OF SERVICE	ACCESS- PERMISSION GROUP	LEVEL OF ACCESS- PERMISSION
START, STOP, RESET	SUPER USER	1
REWRITING OF APPLICATION	SUPER USER	2
RS232C COMMUNICATION SERVICE	HVAC	5
MONITORING OF HUMIDITY	HVAC	6
WHM (WATT HOUR METER) MEASUREMENT	ENERGY MONITOR	6
TURNING-ON/OFF OF LIGHT SWITCH	ENERGY MONITOR	5
ACQUIRING OF THE AMOUNT OF POWER CONSUMED BY ALL DEVICES	ENERGY MONITOR	4
ACQUIRING OF TEMPERATURE INFORMATION FROM ALL TEMPERATURE SENSORS	HVAC	4
:	i i	:

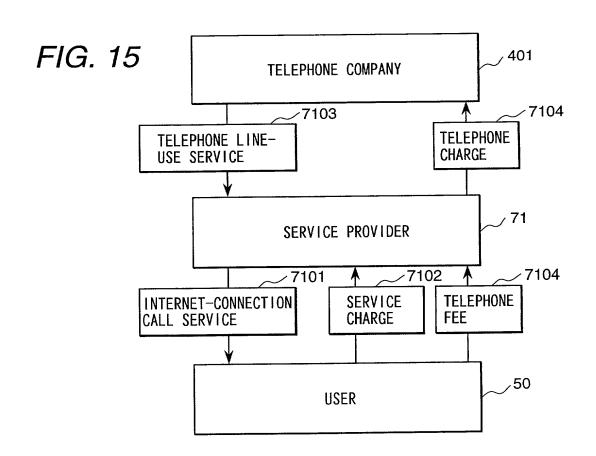


FIG. 16

